

Community Safety Products

SOLD
AT COST
PRICE



WINDOW SHOCK ALARM
£2.50

Uses a shock sensor to detect if an attempt to break a window or glass panel is made. The alarm is placed on the inside of the window with an adhesive sticker which also acts as a visual deterrent helping to prevent break-ins and vandalism.



PERSONAL ALARM
£2.00

This small alarm has a powerful high frequency siren that aims to discourage a potential attacker and attract immediate attention. To operate the alarm, push both sides at the same time and to stop it, push the bottom 'off' button.



PERSONAL ALARM
£2.00

A slimline personal alarm with a torch function. The alarm has a 128+ dBs siren. Simply pull the cord to activate alarm, or replace the rip-cord with the supplied key-ring attachment.



TIMER SWITCH
£2.00

This 24 hour segment timer can be used to switch lights and some electrical appliances on/off automatically. It works by manually setting 15 minute segments to an on/off position in any 24 hour period. Good burglary deterrent.



CYCLE LOCK
£7.50

Convenient and cost effective D-lock acts as a deterrent to cycle theft and is more secure than a standard cable lock. Includes an easy fit mounting bracket.

AVAILABLE IN MOST CITY LIBRARIES

Please speak to a member of staff to view the product you are interested in.

Please note that there may be slight changes to the products shown above due to changes in suppliers, for example in colour or design.



Community Safety Products

SOLD
AT COST
PRICE



WINDOW SHOCK ALARM
£2.50

Uses a shock sensor to detect if an attempt to break a window or glass panel is made. The alarm is placed on the inside of the window with an adhesive sticker which also acts as a visual deterrent helping to prevent break-ins and vandalism.



PERSONAL ALARM
£2.00

This small alarm has a powerful high frequency siren that aims to discourage a potential attacker and attract immediate attention. To operate the alarm, push both sides at the same time and to stop it, push the bottom 'off' button.



PERSONAL ALARM
£2.00

A slimline personal alarm with a torch function. The alarm has a 128+ dBs siren. Simply pull the cord to activate alarm, or replace the rip-cord with the supplied key-ring attachment.



TIMER SWITCH
£2.00

This 24 hour segment timer can be used to switch lights and some electrical appliances on/off automatically. It works by manually setting 15 minute segments to an on/off position in any 24 hour period. Good burglary deterrent.



CYCLE LOCK
£7.50

Convenient and cost effective D-lock acts as a deterrent to cycle theft and is more secure than a standard cable lock. Includes an easy fit mounting bracket.

AVAILABLE IN MOST CITY LIBRARIES

Please speak to a member of staff to view the product you are interested in.

Please note that there may be slight changes to the products shown above due to changes in suppliers, for example in colour or design.



Property marking UV pen



It is recommended that you mark all your valuable property with a property marking UV pen to help increase the likelihood of your property being returned if it is stolen.

Simply write your postcode and house number on your valuables with a UV pen and watch the writing discreetly vanish. This writing can then only be seen under UV or black light.

Postcode all valuable property like televisions, DVD players, games consoles, cameras, video camcorder, laptop, mobile phones, other electrical items, tools equipment, garden equipment and office equipment.

You may wish to create a table of items that you have marked with a postcode, similar to the table below. In addition register your possessions for free on www.immobilise.com.



Item	Serial number	Location where property marked
Make and model of item	123 456 7890	At the left hand corner on the back



Property marking UV pen



It is recommended that you mark all your valuable property with a property marking UV pen to help increase the likelihood of your property being returned if it is stolen.

Simply write your postcode and house number on your valuables with a UV pen and watch the writing discreetly vanish. This writing can then only be seen under UV or black light.

Postcode all valuable property like televisions, DVD players, games consoles, cameras, video camcorder, laptop, mobile phones, other electrical items, tools equipment, garden equipment and office equipment.

You may wish to create a table of items that you have marked with a postcode, similar to the table below. In addition register your possessions for free on www.immobilise.com.



Item	Serial number	Location where property marked
Make and model of item	123 456 7890	At the left hand corner on the back

